

EPIC® SENSORS

WELDABLE TEMPERATURE SENSOR TYPE T-D / W-D DATA SHEET 4

INSTALLATION INSTRUCTIONS AND USER MANUAL

Table of contents



Product description and intended use	2
Temperatures, measuring	3
Temperatures, ambient	3
Temperatures, Ex versions	3
Code key	4
Technical data	5
Materials	5
Dimensional drawing	6
Installation instructions and example	7
Installation of accessories	8
Thermowells:	8
Welding sleeves:	9
Neck pipe with sensor head:1	0
Tightening torques1	0
Opening the connection head, standard and Ex i versions	1
Opening the connection head, Ex d versions1	2
Pt100; connection wiring1	3
Pt100; measuring current1	3
TC; connection wiring1	4
TC; non-grounded or grounded types1	4
TC; thermocouple cable standards (color table)1	5
Type label of standard versions1	6
Serial number information1	6
Ex d data (only for types with Ex d approval)1	7
Ex i data (only for types with Ex i approval)1	9
EU Declaration of Conformity2	1
Manufacturer contact information2	1
Document history2	1
ANNEX A: Ex i specifications and special conditions for use	
Document history	

Lapp Automaatio Oy Martinkyläntie 52 FI-01720 Vantaa, Finland **Tekninen myynti/Technical sales:** P: +358 (0)20 764 6410

Avoimet tilaukset/Open orders: P: +358 (0)20 764 6420

Kotipaikka/Domicile Vantaa

Y-tunnus: 1107293-1 VAT: FI11072931 Lapp Automaatio on osa LAPP Groupia A Lapp Group Company

Lapp Insulator ei ole osa LAPP Groupia Lapp Insulator is not affiliated with the LAPP Group



Product description and intended use

Sensor types T-D (thermocouple, TC) and W-D (resistance, RTD) are weldable temperature sensors with neck pipe, constructed according to DIN 43772 form 4.

Sensors are intended for various industrial measuring applications, to be immersed to process by the weldable thermowell. The most common thermowell type is D4. Thermowell material can be chosen, and neck pipe length can be produced for a certain sensor insert length, according to customer needs.

Weldable thermowells with neck pipe (cooling neck) are used when there is a need for robust thermowell, which must be securely welded on process structure.

Measuring inserts are mineral insulated (MI) elements, which can be changed on the fly. Inserts can be TC or RTD inserts, standard versions are K-type thermocouple (for T-D) and 4-wire Pt100 (for W-D). Tailored versions are produced on request.

Sensors are available with ceramic connection block (type designation: "-CB") or with open wire ends to be connected to temperature transmitter inside the sensor head (type designation: "-TR"). The latter can be delivered with a transmitter.

Also available as ATEX and IECEx approved protection type Ex d and Ex i versions. Please see sections *Ex d data* and *Ex i data*.

EPIC® SENSORS temperature sensors are measuring devices intended for professional use. They should be mounted by professionally capable installer who understands the installations surroundings. The worker should understand mechanical and electrical needs and safety instructions of the object installation. Suitable safety gear for each installation task must be used.

Special feature: Response times of welded wells

Weldable thermowells are designed for harsh circumstances, thus they are manufactured of massive steel bodies to give security and lifetime for measurement. This means also, that the temperature change is not measured as quickly as with some other sensor structures.

Some typical response times are given below, for thermowell type D4S as an example.

Thermowell	Response time [s] (typical)						
type	In water,	water, 0,4 m/s In air, 1 m/s			In steam, 40 m/s		
	t _{0,5}	t _{0,9}	t _{0,5}	t _{0,9}	t _{0,5}	t _{0,9}	
D4S	10	27	300	1035	5	8	

NOTE!

 $t_{0,5}$ and $t_{0,9}$ are time periods which the sensor takes to achieve 50 % and 90 % of the temperature change end value in medium.

If the medium and velocity deviate from this, the time can change significantly.



Temperatures, measuring

Allowed measuring temperature range for sensor tip is:

With Pt100 -200...+550 °C

• With TC -200...+1200 °C, depending on TC type, thermowell* and neck pipe length.

*Allowed maximum temperature for standard thermowell materials is:

K / AISI316L / 1.4404 +550 °C, scaling temperature appr. +800 °C

L / 13CrMo44 / 1.7335 +550 °C
 M / 10CrMo910 / 1.7380 +580 °C
 O / 16Mo3 / 1.5415 +480 °C.

High temperature steel alloys and other materials on request.

NOTE! These values highly depend on application-specific circumstances. The summary of all affecting data in each application includes the process pressure, temperature, medium, and flow values, thermowell material, dimensions, and device and process design.

Temperatures, ambient

Allowed ambient temperature range for connection head, including connection wires, is:

• Without transmitter (element type -CB) -40...+135 °C

With transmitter (element type -TR)
 according to transmitter manufacturers data

Make sure the process temperature is not too much for the sensor head and/or to the transmitter inside.


Temperatures, Ex versions

For Ex versions only (type designations -EXD- and -EXI-), specific temperature conditions apply according to the ATEX and IECEx certificates. For more details, please see sections:

- Ex d data (only for types with Ex d approval), sensor type designation -EXD-
- Ex i data (only for types with Ex i approval), sensor type designation -EXI-.



Code key

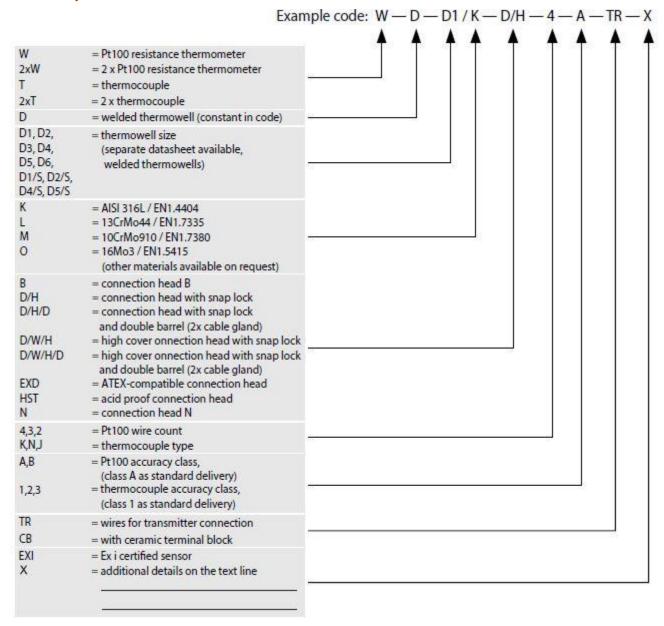



Technical data

Materials	AISI 316L, max. temperature +550 °C, temporarily +600 °C 13CrMo44/1.7335, max. temperature +550 °C 10CrMo910/1.7380, max. temperature +580 °C 16Mo3/1.5415, max. temperature +480 °C Other materials available on request, for example: AISI S31803/1.4462, SMO254/1.4547, AISI304L/1.4307, TiGr2/3.7035, etc.
Thermowell types	D1, D2, D3, D4, D5, D6 with M18x1,5 thread or D1/S, D2/S, D4/S, D5/S with M14x1,5 thread According to standard DIN 43772 form 4, other thermowell types on request
Tolerances Pt100 (IEC 60751)	A tolerance $\pm 0.15 + 0.002$ x t, operating temperature $-100+450$ °C B tolerance $\pm 0.3 + 0.005$ x t, operating temperature $-196+600$ °C B $1/3$ DIN, tolerance $\pm 1/3$ x $(0.3 + 0.005$ x t), operating temperature $-196+600$ °C B $1/10$ DIN, tolerance $\pm 1/10$ x $(0.3 + 0.005$ x t), operating temperature $-196+600$ °C
Tolerances thermocouple (IEC 60584)	Type J tolerance class 1 = -40375 °C \pm 1.5 °C, 375750 °C \pm 0.004 x t Type K and N tolerance class 1 = -40375 °C \pm 1.5 °C, 3751000 °C \pm 0.004 x t
Temperature range Pt 100	-200+550 °C
Temperature range thermocouple	-200+1200 °C depending on thermoelement, thermowell material and cooling neck length Neck pipe length = 250 mm → temp. max. +750 °C Neck pipe length = 300 mm → temp. max. +1000 °C Neck pipe length = 350 mm → temp. max. +1200 °C
Approvals	ATEX, IECEX, EAC Ex, EAC EMC, METROLOGICAL PATTERN APPROVAL
Quality certificate	ISO 9001:2015 and ISO 14001:2015 issued by DNV
IP rating	IP65, higher IP rating on request

NOTE!

Thermowell pressure features are according to DIN 43772. These values highly depend on application-specific circumstances. The summary of all affecting data in each application includes the process pressure, temperature, medium, and flow values, thermowell material, dimensions, and device and process design.

Materials

These are the standard materials of components for the sensor types T-D / W-D.

Connection head:

o Standard or Ex i Aluminum

Ex d (type designation EXD) Aluminum or Stainless Steel (DIN 1.4401, AISI 316)

Gasket of the connection head cover Silicone

Sensor element / MI cable sheath for Pt100: AISI 316L

for TC: Inconel 600 or AISI 316L

Neck pipe and nut
 AISI 316L


Gasket for the thermowell thread
 Copper

Thermowell
 AISI 316L (standard)

Other materials can be used on request.



Dimensional drawing

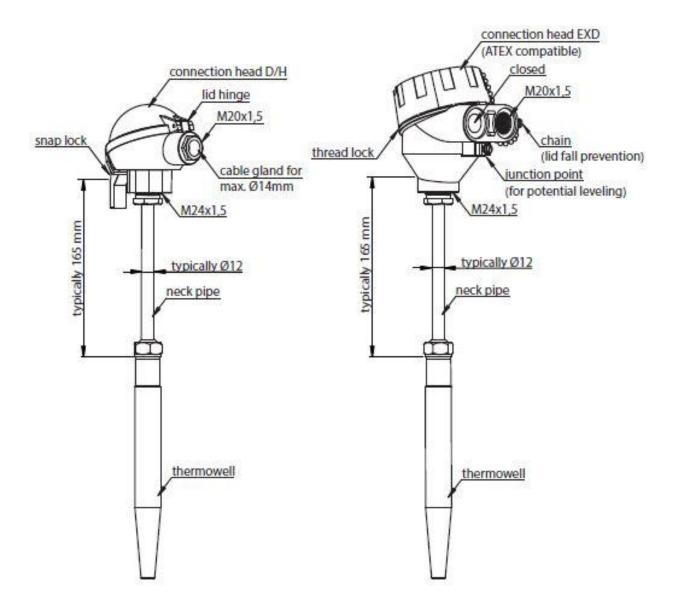



Installation instructions and example

Before any installation, make sure the target process/machinery and site are safe to work!


Also, make sure there are no obstacles to welding work.

Make sure the process structure material matches the thermowell material of the sensor to be installed.

Installation phases:

- Prepare the process structure for welding. Either drill a right size hole or weld a weldable root sleeve to the process structure.
- If using a weldable root sleeve, machine the hole to the right dimension after welding.
 NOTE! Thermowell does not fit in the root sleeve hole before machining!
 E.g., for thermowell size Ø24 mm, the right root sleeve inner diameter is Ø23,7 mm before machining.
- Remove the thermowell from the sensor neck pipe thread by twisting it counterclockwise.
- Weld the removed thermowell securely to the process structure or to the root sleeve.
- After finalizing the welding process, cooling, and getting approved by inspectors (if needed), finally
 screw the sensor to the welded thermowell thread, by twisting sensor clockwise. Make sure the sealing
 fits securely between neck pipe nut and thermowell.
- To tighten the thread connection, use necessary force only. Excess force may destroy the sealing ring.
 Allowed maximum tightening forces are given on applicable standards for each thread size and sealing material.

Image below: this example shows a sensor with thermowell welded on a root sleeve welded on process piping.

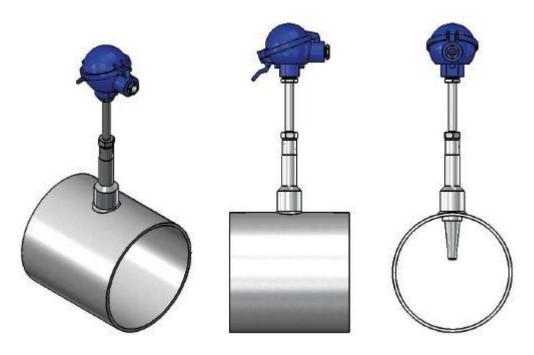



Installation of accessories


As accessories there are **weldable thermowells, root sleeves** and **neck pipes** applicable to weldable thermowells available, as components.

Thermowells:

Weldable thermowells are available in standard materials K, L, M and O, as presented earlier in the *Materials* section.

Installation of an accessory thermowell goes as presented for the complete sensor before.

Available types and dimensions are:

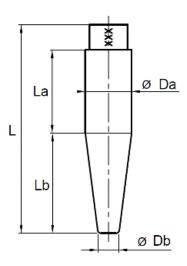

For sensing element diameter/length [mm]	Inner thread	L [mm]	La [mm]	Da [mm]	Lb [mm]	Db [mm]
6/315	M18×1,5	140	50	24h7	65	12,5
6/375	M18×1,5	200	110	24h7	65	12,5
6/435	M18×1,5	260	110	24h7	125	12,5
6/315	M18×1,5	140	50	24h7	65	12,5
6/375	M18×1,5	200	110	24h7	65	12,5
6/435	M18×1,5	260	110	24h7	125	12,5
6/315	M18×1,5	140	50	24h7	65	12,5
6/375	M18×1,5	200	110	24h7	65	12,5
6/435	M18×1,5	260	110	24h7	125	12,5
6/315	M18×1,5	140	50	24h7	65	12,5
6/375	M18×1,5	200	110	24h7	65	12,5
6/435	M18×1,5	260	110	24h7	125	12,5
3/315	M14×1,5	140	50	18h7	65	9
3/375	M14×1,5	200	110	18h7	65	9
3/315	M14×1,5	140	50	18h7	65	9
3/375	M14×1,5	200	110	18h7	65	9
3/315	M14×1,5	140	50	18h7	65	9
3/375	M14×1,5	200	110	18h7	65	9
3/315	M14×1,5	140	50	18h7	65	9
3/375	M14×1,5	200	110	18h7	65	9
	element diameter/length [mm] 6/315 6/375 6/435 6/315 6/375 6/435 6/315 6/375 6/435 3/315 3/375 3/315 3/375 3/315 3/375 3/315	element diameter/length [mm] 6/315 M18×1,5 6/375 M18×1,5 6/435 M18×1,5 6/315 M18×1,5 6/375 M18×1,5 6/435 M18×1,5 6/435 M18×1,5 6/375 M18×1,5 6/375 M18×1,5 6/375 M18×1,5 6/435 M18×1,5 6/375 M14×1,5	element diameter/length [mm] Inner thread L [mm] 6/315 M18×1,5 140 6/375 M18×1,5 200 6/435 M18×1,5 260 6/315 M18×1,5 140 6/375 M18×1,5 200 6/435 M18×1,5 260 6/315 M18×1,5 200 6/435 M18×1,5 260 6/315 M18×1,5 260 6/315 M18×1,5 200 6/375 M18×1,5 200 6/435 M18×1,5 200 6/435 M18×1,5 200 3/315 M14×1,5 140 3/375 M14×1,5 140	element diameter/length [mm] Inner thread [mm] L [mm] La [mm] 6/315 M18×1,5 140 50 6/375 M18×1,5 200 110 6/435 M18×1,5 260 110 6/315 M18×1,5 140 50 6/375 M18×1,5 200 110 6/435 M18×1,5 260 110 6/375 M18×1,5 200 110 6/375 M18×1,5 200 110 6/335 M18×1,5 260 110 6/375 M18×1,5 260 110 6/335 M18×1,5 200 110 6/375 M18×1,5 200 110 6/335 M18×1,5 200 110 3/315 M18×1,5 200 110 3/375 M14×1,5 140 50 3/375 M14×1,5 140 50 3/375 M14×1,5 140 50 3/375 M14	element diameter/length [mm] Inner thread L [mm] La [mm] Da [mm] 6/315 M18×1,5 140 50 24h7 6/375 M18×1,5 200 110 24h7 6/435 M18×1,5 260 110 24h7 6/315 M18×1,5 200 110 24h7 6/375 M18×1,5 200 110 24h7 6/335 M18×1,5 260 110 24h7 6/315 M18×1,5 260 110 24h7 6/375 M18×1,5 200 110 24h7 6/335 M18×1,5 260 110 24h7 6/375 M18×1,5 260 110 24h7 6/335 M18×1,5 200 110 24h7 6/375 M18×1,5 200 110 24h7 6/375 M18×1,5 200 110 24h7 6/435 M18×1,5 200 110 24h7 3/315 <t< td=""><td>element diameter/length [mm] Inner thread [mm] L [mm] La [mm] Da [mm] Lb [mm] 6/315 M18×1,5 140 50 24h7 65 6/375 M18×1,5 200 110 24h7 65 6/435 M18×1,5 260 110 24h7 65 6/315 M18×1,5 200 110 24h7 65 6/375 M18×1,5 200 110 24h7 65 6/315 M18×1,5 260 110 24h7 65 6/375 M18×1,5 200 110 24h7 65 6/375 M18×1,5 200 110 24h7 65 6/375 M18×1,5 200 110 24h7 65 6/315 M18×1,5 260 110 24h7 65 6/375 M18×1,5 200 110 24h7 65 6/375 M18×1,5 200 110 24h7 65 6/335</td></t<>	element diameter/length [mm] Inner thread [mm] L [mm] La [mm] Da [mm] Lb [mm] 6/315 M18×1,5 140 50 24h7 65 6/375 M18×1,5 200 110 24h7 65 6/435 M18×1,5 260 110 24h7 65 6/315 M18×1,5 200 110 24h7 65 6/375 M18×1,5 200 110 24h7 65 6/315 M18×1,5 260 110 24h7 65 6/375 M18×1,5 200 110 24h7 65 6/375 M18×1,5 200 110 24h7 65 6/375 M18×1,5 200 110 24h7 65 6/315 M18×1,5 260 110 24h7 65 6/375 M18×1,5 200 110 24h7 65 6/375 M18×1,5 200 110 24h7 65 6/335

Other types and materials on request.



Welding sleeves:

This accessory component is also known as root sleeve or weld socket.

The sleeve material must be chosen according to the process media and structure material to be welded on. Available materials are similar to standard thermowell materials: K, L, M and O.

Before any installation, make sure the target process/machinery and site are safe to work!

Also, make sure there are no obstacles to welding work.

Installation phases:


- First drill a hole large enough for the narrow bottom end of the sleeve to enter.
- Lower the sleeve to the appropriate depth in the hole and make sure that the bottom edge of the sleeve
 does not affect the flow of the process media. If necessary, machine the bottom edge of the sleeve
 according to the thickness of the material drilled.
- Weld the sleeve securely to the process material.
- Machine the sleeve hole (inner diameter) to the right dimension after welding.
 - NOTE! Thermowell does not fit in the sleeve hole before machining!
 - E.g. for thermowell size Ø24 mm, the right sleeve inner diameter is Ø23,7 mm before machining.
- If necessary, prevent chips or other machining residues from entering the process, or remove the residues from the process before further procedures.
- After cooling, finalizing the welding process and getting approved by inspectors (if needed), finally weld
 the weldable thermowell to the welded sleeve, as presented on page *Installation instructions*.

Available types are:

Type	For well type	Type	For well type
18-K	D1S and D4S	24-K	D1, D4 and D5
18-L	D1S and D4S	24-L	D1, D4 and D5
18-M	D1S and D4S	24-M	D1, D4 and D5
18-O	D1S and D4S	24-0	D1, D4 and D5



Image below: Dimensions of standard welding sleeves

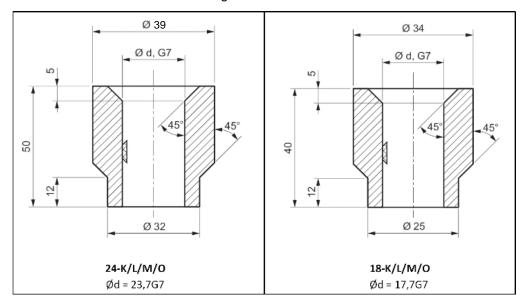



Neck pipe with sensor head:

Available as accessories is also neck pipe with sensor head, without sensing element, without thermowell.

These components have dimensions fitted with weldable D-thermowells. Neck pipe has a standard length 165 mm.

To install these accessories to welded thermowells; first screw the neck pipe thread to a thermowell thread by twisting it clockwise, then insert a sensing element, then lower the element into a thermowell, make sure the sealing fits securely between neck pipe nut and thermowell, and finally screw in the element in the sensor head. Use spring-loaded screws (two pieces) delivered with sensing element (element type CB) or delivered with transmitter (element type TR).



Available types are as follows:

Type / thread For thermowell type

H-12-D/H-165 / M18X1,5 D1, D4 and D5 H-12-D/H-165 / M14X1,5 D1S and D4S

Tightening torques

Use only tightening torques allowed in applicable standards of each thread size and material.




Opening the connection head, standard and Ex i versions

Before any connection work the connection head has to be opened. Do not open the connection head cover if there is a risk of dirt or moisture/liquids entering the wiring space inside!

Image below: Opening the cover, when using a connection head...

- 1. with snap lock (quick release clip), connection head type designation -D/H-; lift the clip up.
- 2. with screw lock; open the screw by twisting it counter-clockwise.

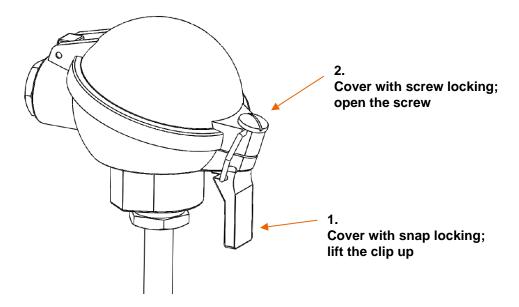

After releasing the locking, lift the cover up.



Opening the connection head, Ex d versions


Do not open the connection head cover if explosive atmosphere is present!

Do not open the cover if there is a risk of dirt or moisture/liquids entering the wiring space inside!

The Ex d certified sensors head, type designation -EXD-, can be opened by twisting the cover counterclockwise.

Image below: 1. Opening the EXD sensor head, twisting cover ccw.

2. Earth terminal, ground connection screw.

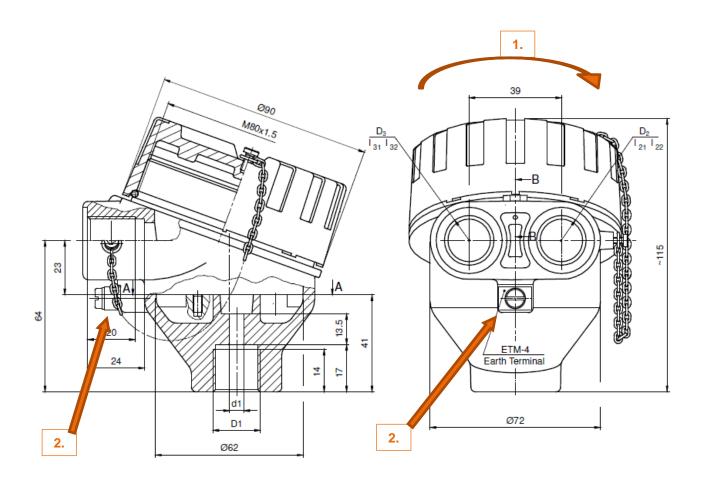


Please see also section "Ex data".



Pt100; connection wiring

Image below: These are the connection colors of Pt100 resistor connections, according to standard EN 60751.

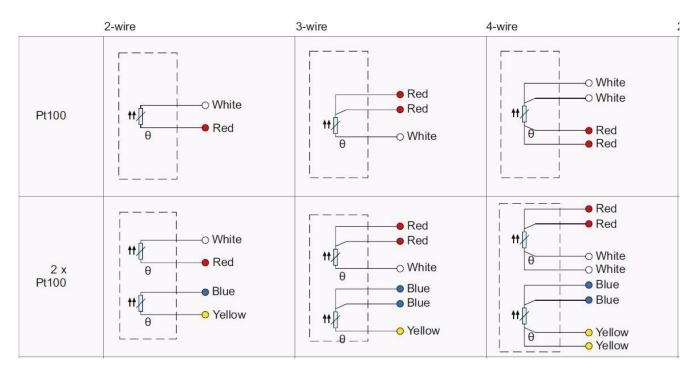

Other connections on request.

Pt100; measuring current

The highest allowed measuring current for Pt100 measuring resistors depends on resistor type and brand.

Normally the recommended maximum values are:

Pt100 1 mA
 Pt500 0,5 mA
 Pt1000 0,3 mA.


Do not use higher measuring current. It will lead to false measurement values and might even destroy the resistor.


Above listed values are normal measuring current values. For Ex i certified sensor types, type designation -EXI-, higher values (worst case) are used for the self-heating calculation for safety reasons. For further details and calculation examples, please see ANNEX A.




TC; connection wiring

Image below: These are the connection colors of TC types J, K and N.

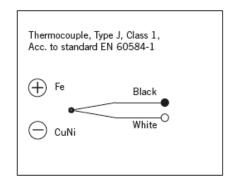

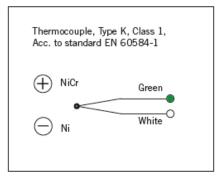

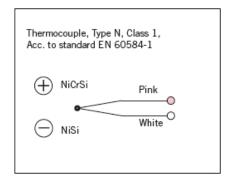

Other types on request.

TC; non-grounded or grounded types

Normally the thermocouple sensors are non-grounded, which means the MI cable sheath is not connected to the thermo material hot junction, where two materials are welded together.


In special applications also grounded types are used.

NOTE! Non-grounded and grounded sensors cannot be connected to same circuits, make sure you are using the right type.

NOTE! Grounded TCs are not allowed for Ex i certified sensor types.


Image below: Non-grounded and grounded structures in comparison.

 Non-grounded TC



Thermo material hot junction and MI cable sheath are galvanically isolated from each other.

 Grounded TC



Thermo material hot junction has galvanic connection with MI cable sheath.



TC; thermocouple cable standards (color table)


New standards:	IEC 60584-3	DIN EN 60584	ISA MC 96.1
Thermo Type	IEC 584	DIN 43714	ANSI MC 96.1
NiCr-Ni / K KCA: Fe-CuNi	+ green/ - white Jacket: green	+ red/ - green Jacket: green	+ yellow/ - red Jacket: yellow
Fe-CuNi / L		+ red/ - blue Jacket: blue	
Fe-CuNi / J	+ black/ - white Jacket: black		+ white/ - red Jacket: black
Pt10Rh-Pt / S SCA: E-Cu/A-Cu	+ orange/ - white Jacket: orange	+ red/ - white Jacket: white	+ black/ - red Jacket: green
Pt13Rh-Pt / R RCA: E-Cu/A-Cu	+ orange/ - white Jacket: orange	+ red/ - white Jacket: white	+ black/ - red Jacket: green
Pt30Rh-Pt6Rh / B	+ grey/ - white Jacket: grey		+ grey/ - red Jacket: grey
NiCrosil-Nisil / N	+ pink/ - white Jacket: pink		
Cu-CuNi / U		+ red/ - brown Jacket: brown	
Cu-CuNi / T	+ brown/ - white Jacket: brown		
NiCr-CuNi / E	+ purple/ - white Jacket: purple	+ red/ - purple Jacket: purple	+ purple/ - red Jacket: purple



Type label of standard versions


Each sensor has a type label attached to. It is a moisture and wear proof industrial grade sticker, with black text on white label. This label has printed information of trade name, web page, type code, CE-mark, product number and serial number, including production date. For these sensors manufacturer contact information is printed on a separate label.

Image below: Example of a non-Ex sensor type label.

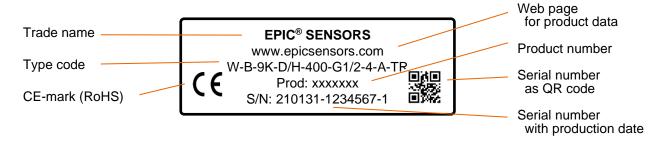

For EAC EMC-approved, sensor+transmitter combination versions, exported to Eurasian Customs Union area, there is a special type label.

Image below: Example of an EAC EMC-approved product type label, including sensor (1) and transmitter (2).

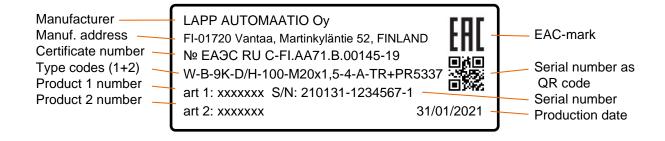

Serial number information

Serial number S/N is always printed on type label in the following form: yymmdd-xxxxxxx-x:

yymmdd production date, e.g. "210131" = 31.1.2021

-xxxxxxx production order, e.g. "1234567"

-x sequential ID number within this production order, e.g. "1"



Ex d data (only for types with Ex d approval)

This sensor type is available also with ATEX, IECEx and EAC Ex d approvals. Assembly consists of a temperature sensor connected to a transmitter or ceramic terminal block in an Ex db certified enclosure (sensor head type designation -EXD-). All relevant Ex data is given below.

Ex d – Special Conditions for Use

For Ex d versions only (type designation -EXD-), specific conditions apply according to the ATEX and IECEx certificates:

Allowed ambient temperature range for the connection head without enclosure window:

-40 °C to + 60 °C with temperature class T6/T80 °C

-40 °C to + 75 °C with temperature class T5/T95 °C

Allowed ambient temperature range for the connection head with enclosure window:

-40 °C to + 60 °C with temperature class T6/T80 °C.

Ex d certificates and Ex markings

Certificate - Number	Issued by	Applicable area	Marking
ATEX – EESF 18 ATEX 052X	Eurofins Expert Services Oy, Finland, Notified Body Nr 0537	Europe	Ex II 2G Ex db IIC T6/T5 Gb Ex II 2D Ex tb IIIC T80°C/T95°C Db
IECEx – IECEx EESF 20.0034X	Eurofins Expert Services Oy, Finland, Notified Body Nr 0537	Global	Ex db IIC T6/T5 Gb Ex tb IIIC T80°C/T95 °C Db
EAC - № EAЭC RU C- FI.AA71.B.00130-19	Lenpromexpertiza OOO, Russia	Eurasian Customs Union (Belarus, Kazakhstan, Russia)	1 Ex d IIC T6/T5 Gb X Ex tb IIIC T80°C/T95°C Db X



Ex d type label

<u>For ATEX, IECEx and KCs Ex d approved</u> versions there is more information on the label, according to applicable standards.

Image below: Example of an ATEX and IECEx approved sensor type label.

Lapp Automaatio Oy Martinkyläntie 52 FI-01720 Vantaa Finland +358 (0) 20 764 6410 EPIC® SENSORS www.epicsensors.com EESF 18 ATEX 052X, IECEx EESF 20.0034X
W-B-9K-EXD-400-G1/2-4-A-CB
Prod: xxxxxxx S/N: 210131-1234567-1
II 2 G Ex db IIC T6/T5 Gb

Manufacturer contact information. For some sensor types, this may also be printed on a separate label for practical reasons.

Ex certificate number(s)
Type code

Product number Serial number with production date Ex-mark (ATEX) Ex markings

CE-mark (ATEX and RoHS)

Notified body number

Serial number as QR code

Special technical values (if needed)

<u>For EAC Ex d approved</u> sensor versions, exported to Eurasian Customs Union area, there is a special type label.

Image below: Example of an EAC Ex-approved sensor type label.

Manufacturer -LAPP AUTOMAATIO Oy FI-01720 Vantaa, Martinkyläntie 52, FINLAND EAC Ex -mark Manuf. address Ex certificate number -№ EAЭC RU C-FI.AA71.B.00130-19 Serial number as Type code T-B-9K-EXD-100-G1/2-N-1-CB QR code Product number -S/N: 210131-1234567-1 art: xxxxxxx Ex marking Serial number 1Ex d IIC T6...T5 Gb X Ex tb IIIC T80°C...T95 °C Db X 31/01/2021 Production date



Ex i data (only for types with Ex i approval)

This sensor type is available also with ATEX and IECEx Ex i approvals. Assembly consists of a temperature sensor connected to a transmitter or ceramic terminal block in an enclosure (sensor type designation -EXI-). All relevant Ex data is given below.

Ex i – Special Conditions for Use

There are special specifications and conditions for use defined in certificates. These include e.g. Ex data, allowed ambient temperatures, and self-heating calculation with examples. These are presented in Annex A: Specification and special conditions for use - Ex i approved EPIC®SENSORS temperature sensors.

Ex i certificates and Ex markings

Certificate - Number	Issued by	Applicable area	Marking
ATEX – EESF 21 ATEX 043X	Eurofins Electric & Electronics Finland Oy, Finland, Notified Body Nr 0537	Europe	Ex II 1G Ex ia IIC T6T3 Ga Ex II 1/2G Ex ib IIC T6T3 Ga/Gb Ex II 1D Ex ia IIIC T135 °C Da Ex II 1/2D Ex ib IIIC T135 °C Da/Db
IECEx – IECEx EESF 21.0027X	Eurofins Electric & Electronics Finland Oy, Finland, Notified Body Nr 0537	Global	Ex ia IIC T6T3 Ga Ex ib IIC T6T3 Ga/Gb Ex ia IIIC T135 °C Da Ex ib IIIC T135 °C Da/Db

Note! Name change of the Notified Body Nr 0537:

• Until 31.3.2022, the name was: Eurofins Expert Services Oy

As of 1.4.2022, the name is: Eurofins Electric & Electronics Finland Oy.




Ex i type label

<u>For ATEX and IECEx Ex i approved</u> versions there is more information on the label, according to applicable standards.

Image below: Example of an ATEX and IECEx Ex i approved sensor type label.

Lapp Automaatio Oy
Martinkyläntie 52 FI-01720 Vantaa Finland
+358 (0) 20 764 6410
EPIC® SENSORS
www.epicsensors.com

 W-B-9K-D/H-400-G1/2-4-A-CB-EXI
Prod: xxxxxxx S/N: 220231-1234567-1
II 1G Ex ia IIC T6...T3 Ga
II 1/2G Ex ib IIC T6...T3 Ga/Gb





0537 Ui= Ii= Pi= Ci= Li=

Refer to User Manual for Specific Conditions of Use

Manufacturer contact information. For some sensor types, this may also be printed on a separate label for practical reasons. Ex certificate number(s)

Type code

Product number Serial number with production date

Ex-mark (ATEX) Ex markings

CE-mark (ATEX and RoHS)

Notified body number

Serial number as QR code

Special technical values (if needed)



EU Declaration of Conformity

The EU Declaration of Conformity, declaring products' conformance to the European Directives, is delivered with products or sent on request.

Manufacturer contact information

Manufacturer HQ main office:

Lapp Automaatio Oy

Street address Martinkyläntie 52

Postal address FI-01720 Vantaa, Finland

Production site and logistics:

Lapp Automaatio Oy

Street address Varastokatu 10

Postal address FI-05800 Hyvinkää, Finland

Phone (sales) +358 20 764 6410

Emailepicsensors.fi.lav@lapp.comHttpswww.epicsensors.com/

Document history

Version / date	Author(s)	Description
20220902	LAPP/JuPi	Welding sleeve (accessory) instructions update
20220822	LAPP/JuPi	Telephone number update
20220401	LAPP/JuPi	Original version

Although every reasonable effort is made to ensure the accuracy of the content of the operating instructions, Lapp Automaatio Oy is not responsible for the way the publications are used or for possible misinterpretations by end users. The user must ensure that she or he has the latest edition of this publication.

We reserve the right to make changes without prior notice. © Lapp Automaatio Oy



- Ex i approved EPIC® SENSORS temperature sensors

Annex A, page 1/4

Ex data for RTD (resistance temperature sensor) and TC (Thermocouple temperature sensor)

Sensor Ex data, maximum interface values, without transmitter or / and display.

Electrical values	For Group IIC	For Group IIIC
Voltage Ui	30 V	30 V
Current li	100 mA	100 mA
Power Pi	750 mW	550 mW @ Ta +100 °C
		650 mW @ Ta +70 °C
		750 mW @ Ta +40 °C
Capacitance Ci	Negligible, *	Negligible, *
Inductance Li	Negligible, *	Negligible, *

Table 1. Sensor Ex data.

Allowed ambient temperatures - Ex i temperature class, without transmitter and/or display.

Marking, Gas Group IIC	Temperature class	Ambient temperature
II 1G Ex ia IIC T6 Ga	T6	-40+80 °C
II 1/2G Ex ib IIC T6-T3 Ga/Gb		
II 1G Ex ia IIC T5 Ga	T5	-40+95 °C
II 1/2G Ex ib IIC T6-T3 Ga/Gb		
II 1G Ex ia IIC T4-T3 Ga	T4-T3	-40+100 °C
II 1/2G Ex ib IIC T6-T3 Ga/Gb		
Marking, Dust Group IIIC	Power Pi	Ambient temperature
II 1D Ex ia IIIC T135 °C Da	750 mW	-40+40 °C
II 1/2D Ex ib IIIC T135 °C Da/Db		
II 1D Ex ia IIIC T135 °C Da	650 mW	-40+70 °C
II 1/2D Ex ib IIIC T135 °C Da/Db		
II 1D Ex ia IIIC T135 °C Da	550 mW	-40+100 °C
II 1/2D Ex ib IIIC T135 °C Da/Db		

Table 2. Ex i temperature classes and allowed ambient temperature ranges

Note!

The temperatures above are without gable glands.

The compatibility of cable glands must be according to the application specifications.

If the transmitter and/or display will be inside the transmitter housing, the specific Ex requirements of the transmitter and/or display installation must be noted.

The used materials must comply the needs of application, e.g., abrasion, and the temperatures above.

For EPL Ga Group IIC the aluminium parts in connection heads are subject to sparking by impacts or friction. For Group IIIC the maximum input power Pi shall be observed.

When the sensors are mounted across boundary between different Zones, refer to standard IEC 60079-26 section 6, for ensuring the boundary wall between different hazardous areas.

^{*} For sensors with long cable part, the parameters Ci and Li must be included in the calculation. Following values per meter can be used according to EN 60079-14: $C_{\text{cable}} = 200 \text{ pF/m and Lcable} = 1 \text{ } \mu\text{H/m}.$



- Ex i approved EPIC® SENSORS temperature sensors

Annex A, page 2/4

Considering sensor self-heating

Self-heating of the sensor tip shall be considered in respect with Temperature Classification and associated ambient temperature range and manufacturer's instructions for calculating tip surface temperature according to thermal resistances stated in the instructions shall be observed.

Allowed ambient temperature range of sensor head or process connection for Groups IIC and IIIC with different temperature classes are listed in Table 2. For Group IIIC the maximum input power Pi shall be observed.

The process temperature shall not adversely affect ambient temperature range assigned for Temperature Classification.

Calculation for self-heating of the sensor at the tip of sensor or the thermowell tip

When the sensor-tip is located at environment where the temperature is within T6...T3, it is needed to consider the self-heating of the sensor. Self-heating is of particular significance when measuring low temperatures.

The self-heating at the sensor tip or thermowell tip depends on the sensor type (RTD/TC), the diameter of sensor and structure of sensor. It is also needed to consider the Ex i values for the transmitter. The table 3. shows the Rth values for different type of sensors structure.

	Thermal resistance Rth [°C / W]					
Sensor type	Resistance thermometer (RTD)			Thermocouple (TC)		
Measuring insert diameter	< 3 mm	3<6 mm	68 mm	< 3 mm	3<6 mm	68 mm
Without thermowell	350	250	100	100	25	10
With thermowell made from tube material (e.g. B-6k, B-9K, B-6, B-9, A-15, A-22, F-11, etc)	185	140	55	50	13	5
With thermowell – solid material (e.g. D-Dx, A-Ø-U)	65	50	20	20	5	1

Table 3. Thermal resistance based on Test report 211126

Note!

If the measuring device for RTD-measuring is using measuring current > 1 mA, the maximum surface temperature of the temperature sensor tip should be calculated and taken to account. Please see next page.

If sensor type has multiple sensing elements included, and those are used simultaneously, note that the maximum power for all sensing elements should not be more than the allowed total power Pi. Maximum power must be limited to 750 mW. This must be guaranteed by process owner. (Not applicable for Multi-point temperature sensor types T-MP / W-MP or T-MPT / W-MPT with segregated Exi circuits).



- Ex i approved EPIC® SENSORS temperature sensors

Annex A, page 3/4

Calculation for maximum temperature:

The self-heating of the sensor tip can be calculated from formula:

$Tmax = Po \times Rth + MT$

(Tmax) = Maximum temperature = surface temperature at the sensor tip

(Po) = Maximum feeding power for the sensor (see the transmitter certificate)

(Rth) = Thermal resistance (K/W, Table 3.)

(MT) = Medium temperature.

Calculate the maximum possible temperature at the tip of sensor:

Example 1 - Calculation for RTD-sensor tip with thermowell

Sensor used at Zone 0

RTD sensor type: W-M-9K . . . (RTD-sensor with head-mounted transmitter).

Sensor with thermowell, diameter of \emptyset 9 mm.

Medium temperature (MT) is 120 °C

Measuring is made with PR electronics head mounted transmitter 5437D and isolated barrier PR 9106 B. Maximum temperature (Tmax) can be calculated by adding the temperature of the medium that you are measuring and the self-heating. The self-heating of the sensor tip can be calculated from the Maximum power (Po) which is feeding the sensor and Rth-value of used sensor type. (See the Table 3.)

Supplied power by PR 5437 D is (Po) = 23,3 mW (from the transmitter Ex-certificate)

Temperature class T4 (135 °C) must not be exceeded.

Thermal resistance (Rth) for the sensor is = 55 K/W (from Table 3).

Self-heating is 0.0233 W * 55 K/W = 1,28 K

Maximum temperature (Tmax) is MT + self-heating: 120 °C + 1,28 °C = 121,28 °C

The result in this example shows that, the self-heating at the sensor tip is negligible.

The safety margin for (T6 to T3) is 5 °C and that must be subtracted from 135 °C; means that up to 130 °C would be acceptable. In this example the temperature of class T4 is not exceeded.

Example 2 - Calculation for RTD-sensor tip without the thermowell.

Sensor used at Zone 1

RTD sensor type: W-M-6/303 . . . (RTD-sensor with cable, without head-mounted transmitter)

Sensor without thermowell, diameter of Ø 6 mm.

Medium temperature (MT) is 40 °C

Measuring is made with rail-mounted PR electronics PR 9113D isolated transmitter/barrier.

Maximum temperature (Tmax) can be calculated by adding the temperature of the medium that you are measuring and the self-heating. The self-heating of the sensor tip can be calculated from the Maximum power (Po) which is feeding the sensor and Rth-value of used sensor type. (See the Table 3.)

Supplied power by PR 9113D is (Po) = 40,0 mW (from the transmitter Ex-certificate)

Temperature class T3 (200 °C) must not be exceeded.

Thermal resistance (Rth) for the sensor is = 100 K/W (from Table 3).

Self-heating is 0.040 W * 100 K/W = 4,00 K

Maximum temperature (Tmax) is MT + self-heating: 40 °C + 4,00 °C = 44,00 °C

The result in this example shows that, the self-heating at the sensor tip is negligible.

The safety margin for (T6 to T3) is 5 °C and that must be subtracted from 200 °C; means that up to 195 °C would be acceptable. In this example the temperature of class T3 is not exceeded.



- Ex i approved EPIC® SENSORS temperature sensors

Annex A, page 4/4

Additional information for Group II devices: (acc. to EN IEC 60079-0: 2019 section: 5.3.2.2 and 26.5.1)

Temperature class for T3 = 200 °C Temperature class for T4 = 135 °C Safety margin for T3 to T6 = 5 K Safety margin for T1 to T2 = 10 K.

Note!

This ANNEX is an instructional document on specifications. For original regulatory data on specific conditions for use, always refer to ATEX and IECEx certificates:

EESF 21 ATEX 043X IECEx EESF 21.0027X