




Sauter GmbH

Ziegelei 1
D-72336 Balingen
E-Mail: info@kern-sohn.com


Tel.: +49-[0]7433- 9933-0
Fax: +49-[0]7433-9933-149
Internet: www.sauter.eu

FL analog out put description

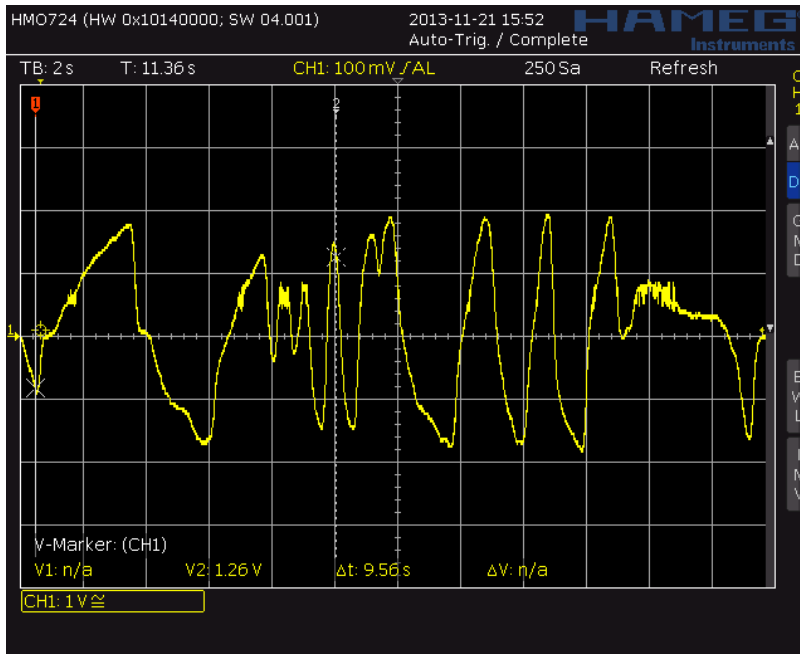

Used jack

Standard 3,5mm

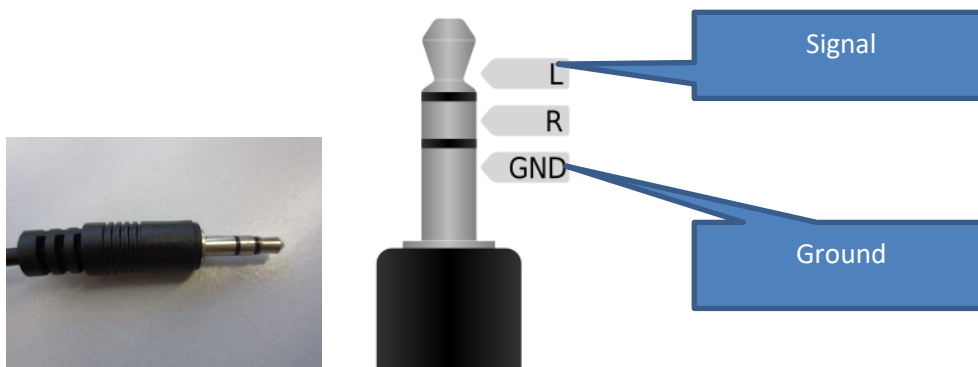

The FL-series have an analog output +/- 2V, the signal will be fetched directly at the load cell.

In normal operation use analog value depend on the reading value of TRACK, PEAKT and PEAKC mode. The signal range is from - 2V to + 2V and it depends on the direction. Pressure from 0 to + 2V and tension 0 to - 2V.

If PASS-FAIL function is used analog value = 2V when PASS, and analog value = 0V when FAIL.