
- PRESSURE/TEMPERATURE DISPLAY/LOGGING
- GAUGE OR ABSOLUTE
- DUAL RELAYS, MAX/MIN INFORMATION
- USER-SET DISPLAY MESSAGING
- 3600 POINT LOGGER (USB or COMPATIBLE ANDROID DEVICE)

> INTRODUCTION

The DM670PM series of battery powered indicators accept gauge or absolute pressure and displays the sensor pressure in BAR, PSI or the user's engineering unit on a 6-digit LCD display. The instrument offers an advanced display mode allowing the user to also display one or two (1 to 32) character messages. Additional to the messages, the user may select an alert-event to occur when the pressure is within a band. The two change-over relays can be used together with the messaging and alerts to provide switching at user-set points. In addition to this, on-board datalogging is also available to record pressure and process temperature process details at up to 3600 points.





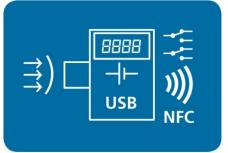

FEATURE HIGHLIGHTS

DUAL RELAYS

The instrument is equipped with dual volt-free changeover-type relays, operating independently. The user may select one of seven actions, including deviation, latched or non-latched operation, with fully adjustable set point and dead band. The Relays may be turned off if not required to extend battery life. An option is provided to trigger an alert-event when a relay contact is on.

DATA LOGGING FUNCTION

DM670PM also provides a powerful data logging function. The log points can be set up to 3600 points, each point is time and date-stamped together with pressure, temperature and relay state information.

The log rate is selectable in steps. The start of log can be delayed if required. Either fixed or rolling logs may be performed.

Two methods of reading the log are available. The USB configuration reads the log and allows the user to save to a text file for export to other programmes. While the NFC android interface allows data transfer to compatible android phones or tablets, by using the downloadable App the data can be graphed and forwarded by email, Bluetooth etc. The NFC interface is also capable of starting a new log with different log period and modes.

CALIBRATION/USER-LINEARISATION

5-point calibration can be applied using the USBSpeedLink software.

As well as straight line interpolation, up to 22 points (x,y) of user-linearization are available for creating custom curves and corrections.

REAL-TIME CLOCK

Date and time-stamped maximum, minimum and average temperature values as well as relay on and relay off data is recorded and can be displayed along with the current time and date. The real-time clock is also used to record the data logged points.

INPUT Pressure			SPECIFICATIONS @20°C
Туре	bar Gauge =	bar Absolute	Accuracy/stability
Gauge *1	-0.5 to 0.5	0.5 to 1.5	
	0 to 3	1 to 4	±0.15% of full scale at 20°C *2
	-1 to 9	0 to 10	±0.5% of full scale between (0 to 50) °C *3
	0 to 30	1 to 31	±0.7% of full scale between (-10 to 80) °C *3
	0 to 100	1 to 101	, , ,
	0 to 600	1 to 601	
Overpressure	1.5 x full scale		
Burst pressure	3 x full scale		
Thermal drift			(-10 to 80) °C compensated

^{*1} Shows zero bar at 1.0 bar absolute, use custom scaling to display as absolute

To maintain full accuracy annual calibration is recommended: contact support@status.co.uk for details

INPUT Temperature		SPECIFICATIONS @20°C
Туре	Range	Accuracy/stability
Medium temperature	(-40 to 110)°C	Typically, ±2.0°C

DISPLAY	
Type/options/function	Description
Display height	15.8 mm non-backlit
Display information options Some information is displayed scrolling.	6 digits 14 segment input value plus "Warning"," Transmit", "NFC", "USB", "Log", "Battery"," Off-set" icons, 8 segment log volume indicators. Maximum, minimum, average*1. Date and time. Custom messages for visual alarms/information. Relay condition.
High intensity LED	Alarm and warning options
*1 Rolling average data log is independent of data logging	

RELAYS Relay 1 and Relay 2	
Type/ options/ function	Description
2 x independent relays	Single pole change-over (common, N/o, N/c)
Rating	48 VDC maximum @ 1 A (5 mA minimum)
	28 VAC RMS maximum @ 1 A

USB CONFIGURATION USER INTERFACE		
Type/options/function	Description	Notes
Configuration hardware	USB Mini B port	Cable not included
Configuration software	USBSpeedLink	Download www.status.co.uk
Operating system	Microsoft Windows	Win 7 or later
Sensor configuration	User calibration	Up to 5 points
	Off-set in Bar	Applied by button action
Display configuration	Display mode	Basic with advanced options
	Pressure units	°C or °F Bar, PSI, mBar, Pa, KPa, MPa Kgf/m², Kgf/cm², Kgf/mm² Atm, custom units (any)
	Custom units	With 22-point linearisation
Pre-set sensor to setpoint	Locks input value to setpoint	For diagnostics
LED alert (advanced mode)	Eight user-adjustable pressure bands	Alert LED flash
Warning symbol	Out of range Low battery level	Warning symbol will flash on LCD display

^{*2} Linearity best straight line, hysteresis, repeatability

^{*3} Total error band: Maximum deviation within specified pressure and operating temperature range

USB CONFIGURATION USER INTERFACE (Continued)		
Basic display mode	Update rate	1 s/ 5 s
	Display variable options	Input, input + units, input + units +
		temperature
	Temperature units	°C or °F
	Push buttons	Active, active with time stamp, off
	Alert LED	Options
	Rolling average	Period, number of samples
Advanced display mode *1	Display variable (see basic mode	e) with messaging options
Battery monitor	Alert LED plus message	Relay option
Logger	Set device passkey number	Device passkey is used to protect the NFC
	Clear/start new log	interface.
Other device options	Synchronise clock	
	Write tag/contact address	
	Read/reset maximum and	
	minimum input values	
	Latitude longitude settings	
Relay control	Name(s)	10 characters
	Action	High, low, band, low battery, on, off
	Setpoint	In engineering units
	Dead band	On/off
	Latch	
Live data	Read sensor pressure	bar
	Read displayed value	Selected engineering unit
	Read sensor temperature	°C
	Relay 1 state. Relay 2 state	
	Time and date	
*1 Only use advanced display above -5°C ambient temperature, below use basic display		

USB LOGGER USER INTERFACE		
Type/options/function	Description	Notes
Logger hardware	USB Mini B port	Cable not included
Logger software	USBLogLink	Download www.status.co.uk
Operating system	Microsoft Windows	Win 7 or later
Logger records pressure and	Start/set log parameters	Interval, rate, (delay) start,
temperature points	Read log parameters	number of points, rolling or fixed log
	Stop, start new log, synchronise,	, read clock, reset maximum and minimum
	View log data/graph log data	Save data to CSV file

NFC ENABLED ANDROID DEVICE REQUEMENTS		
Tag Type	NFC Forum Tag Type 4 (max capacity 65536 Bytes)	
RF Interface	ISO/IEC 14443 Type B Compliant (13.56 MHz)	
Android device Compatibility to read NFC Tag type 4 to full capacity 65536 bytes		
Note: If the Android device cannot read full bytes the maximum number of log points will be reduced.		

NFC LOGGER USER INTERFACE ANDROID		
Type/options/function	Description	Notes
Logger software	NFCLogLink	Download from www.status.co.uk
Operating system	Android V4.4 Kitkat or later	NFC enabled
Logger records pressure and	Start/set log parameters	Interval, rate, (delay) start,
temperature points	Read log parameters	number of points, rolling or fixed log
	Stop, start new log, synchronise	, read clock
	Reset maximum and minimum	
	View log data/ graph log data	Save data to text file
	Transfer data via email etc.	Standard Android functions

PUSH BUTTON USER INTERFACE		
Button	Description	Notes
Maximum and minimum	Display, display and reset	Time and date stamp option
	Offset, offset reset	
	Rolling average option	Number and rate options
Relay	Display relay configuration Reset latched relay	Time and date stamp option
Relay setpoint adjustment is not possible using front panel buttons, USBSpeedLink required		
Buttons can be locked out to avoided tampering		

GENERAL	
Function	Description
Update rate	1 or 5 seconds
Relay response time	< 10 seconds
Battery	1 x (AA 3.6 V lithium)
Battery life	1 year minimum @20°C (longer depending on options selected)
Clock accuracy	±2 seconds per month typically


ENVIRONMENTAL	
Function	Description
Ambient housing temperature	Operating/storage (-30 to 70)°C
Ambient sensor temperature	Operating (-40 to 110)°C
Ambient humidity	Operating/storage (10 to 90) %RH non-condensing
Protection	IP65, cable entry must be sealed to IP65
USB configuration ambient	(10 to 30)°C

CONNECTIONS		
Sensor to process	1/4 inch BSP male with adaptor options (see accessories)	
Output relays	2 x Two-part screw connectors	
USB connection	USB mini B port	

MECHANICAL		
Enclosure (case)	Stainless steel, side or base mount options	
Case entry	1 x M16 female thread, blanking plug supplied	
Front bezel diameter	113 mm	
Weight (approximate)	520 g	
Material in contact with media	Stainless steel 316L	
O-ring	Viton	

APPROVALS	
EMC	BS EN 61326
Ingress protection	BS EN 60529
RoHS	Directive 2011/65/EU

ORDER CODE	DM670PM			
Case	Body type	Orde	r Input range required in bar gauge	
Side mounted	/I	/option	Input range in bar gauge	
Base mounted	/J	/option	9 = (-1 to 9) 0.5 = (-0.5 to 0.5) 3 = (0 to 3) 30 = (0 to 30) 100 = (0 to 100) 600 = (0 to 600) See Input specification for absolute ranges	
Wall mount	/L	/option		
Example: Side mounted, (0 to 30) bar			Cable entry	
DM670PM	/I	/30	M16	

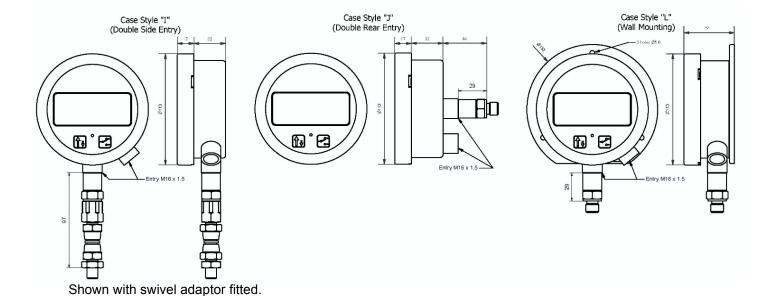

ACCESSORIES	
Swivel adaptor 1/4 BSPP	SA14BSP
Swivel adaptor ½ BSPP	SA12BSP
Swivel adaptor 1/4 NPT	SA14NPT
Swivel adaptor other options available	sales@status.co.uk
Hygienic fittings available	sales@status.co.uk
Configuration software	USBSpeedLink free of charge from www.status.co.uk
USB logging software	USBLogLink free of charge from www.status.co.uk
NFC logging software	NFCLogLink free of charge from www.status.co.uk
USB lead	USB lead, part number 42-200-0001-01
Battery 3.6 V lithium	Contact sales@status.co.uk

To maintain full accuracy annual calibration is required contact: support@status.co.uk for details. The data in this document is subject to change. Status Instruments assumes no responsibility for errors



Tel: +44 (0)1684 296818 Fax: +44 (0)1684 293746 Email: sales@status.co.uk Website: www.status.co.uk

